

# Checksafe Indicators

Use of Checksafe Indicators provides a unique visual method of checking the correct torque setting of Permanent Way and certain signalling bolts. With their use, patrolling and maintenance check times can be considerably improved.



Fitting of the Checksafe Indicators is very simple: merely fit to the correctly torqued nut and align with an adjoining indicator.



Once fitted, Checksafe Indicators will positively identify any bolt which becomes loose by loss of torque. It is then simply a case of removing the indicator, tightening the bolt to the correct torque setting and replacing the indicator.

## Checksafe Indicators are available as follows –

Cat No	57/48881	Checksafe Indicator double point for 41 mm square nuts
Cat No	57/48882	Checksafe Indicator single point for 41 mm square nuts
Cat No	82/000119	Checksafe Indicator 24 mm nuts
Cat No	82/000120	Checksafe Indicator 32 mm nuts
Cat No	82/000131	Checksafe Indicator 30 mm nuts

### Contact for technical advice

Telephone: 01270 847707

Facismail: 01270 847721

e-mail: [technicalsupport@unipartrail.com](mailto:technicalsupport@unipartrail.com)

---

Available from:  
**Unipart Rail**, Gresty Road, Crewe, Cheshire, CW2 6EH, UK  
**T** +44 (0) 1270 847 600 **F** +44 (0) 1270 847601